


E

SPARE PARTS LIST

Pressure
Controller

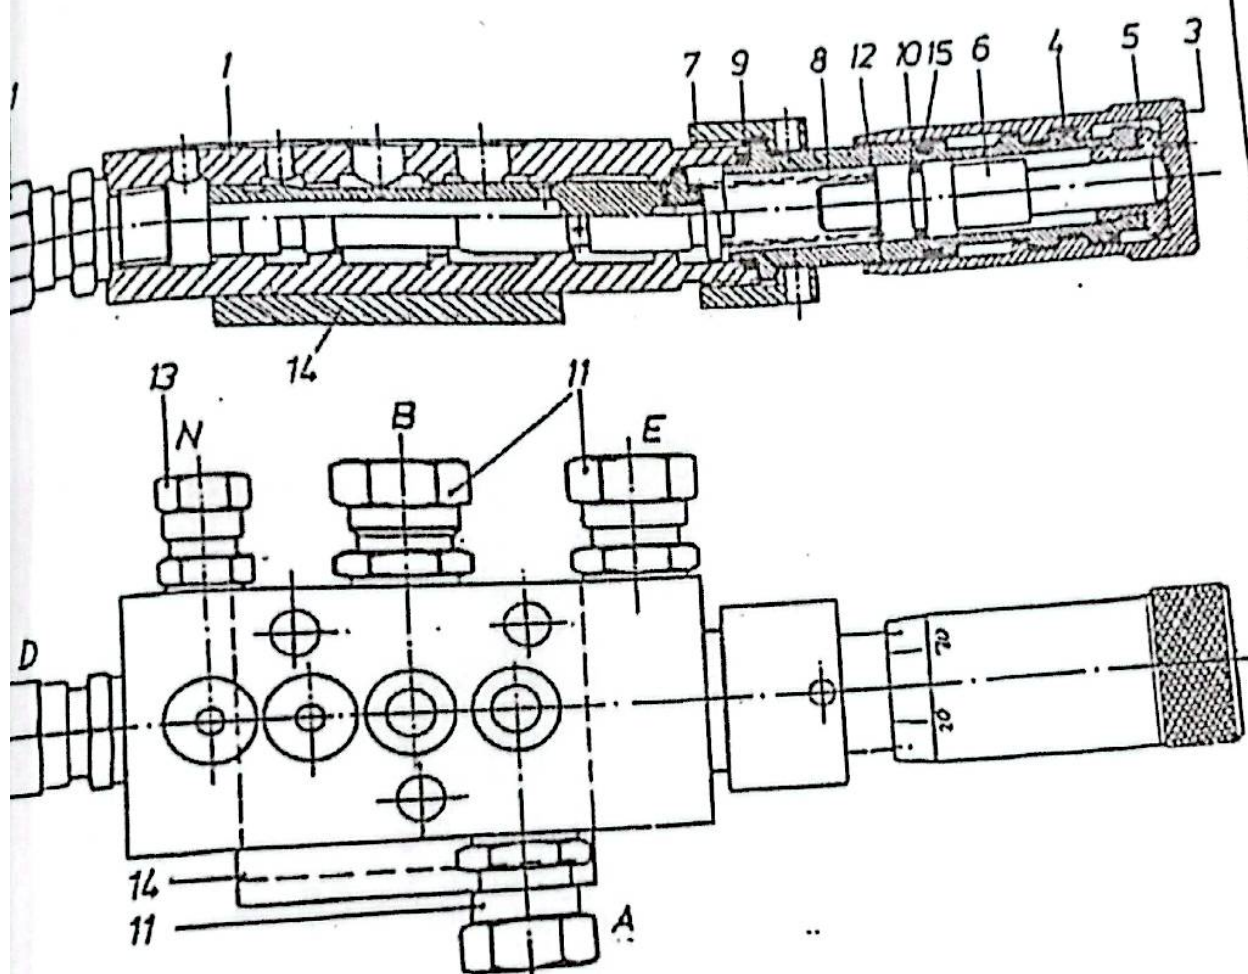

s.	Description	Spare parts No.	Piece-per-par
	Housing with piston	162 230	1
	Bushing	051 519	1 10
	Threaded bolt	071 544	1
	Stopper	071 501	1
	Spring bolt	071 498	1
	Nut	051 055	1
	Pressure spring	032 972	1 10
	O-Ring 20, 3x2, 4; Viton	021 237	1 10
	O-Ring 11, 3x2, 4; Viton	021 148	4
	Tube connector	110 582	4
	Washer	094 625	1
	Tube connector	110 590	1
	Fastener	147 184	